


HOW TO UPGRADE THE FIRMWARE OF GRIPONE ISIDE 2

(Hardware version \geq 007)

All new firmware for GRIPONE ISIDE 2 are available (online) as ".HEX" file. To update GRIPONE ISIDE 2 with the new firmware, follow the steps below.

- Download the latest firmware version from our web site https://www.gripone.com/gripone_iside-2/
- Save the new firmware on your computer
- Open the file downloaded (".ZIP" format) and save the included ".HEX" file on your computer
- Download and install MikroBootloader (available at http://download.gripone.com/Firmware/mikroBootloader_USB_HID.zip) [only the first time]
- Run MikroBootloader
- Connect the laptop to the ECU (by the USB cable)
- As soon the "Device" and "MCU Type" have been detected (1) by MikroBootloader, press "Connect" button
- Press "Browse for HEX" button (2) and select the new firmware (file .HEX)
- Press "Begin uploading" (3) and wait the end of process

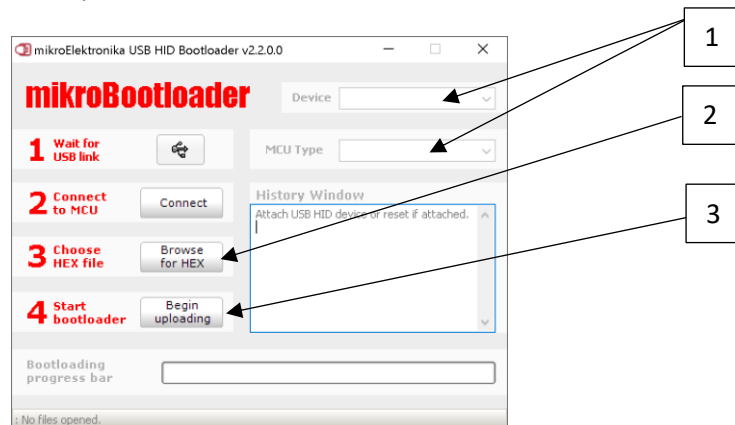

- After updating the firmware, you have to send the configuration (4) and initialize the IMU (5) by the GRIPONE ISIDE HID software. Follow the instruction included in the user manual to send the configuration and initialize the offset.

